# resideo Pressure Reducing Valves

# Braukmann D05FS

# Pressure reducing valve with balanced seat

Standard pattern with setting scale

#### **APPLICATION**

According EN 806-2 pressure reducing valves of this type protect household water installations against excessive pressure from the supply. They can also be used for industrial or commercial applications within the range of their specification.

By installing a pressure reducing valve, pressurisation damage is avoided and water consumption is reduced.

The set pressure is also maintained constant, even when there is wide inlet pressure fluctuation.

Reduction of the operating pressure and maintaining it at a constant level minimizes flow noise in the installation.

#### **APPROVALS**

DVGW

#### **SPECIAL FEATURES**

- Inlet pressure balancing no influence on outlet pressure by fluctuating inlet pressure
- The valve insert is of high-quality synthetic material and can be fully exchanged
- The outlet pressure is set by turning the adjustment knob
- The set pressure is directly indicated on the set point scale
- The adjustment spring is not in contact with the drinking water
- With internal and external threads  $^{1}/_{2}$ " 1", with external threads 1  $^{1}/_{4}$ " 2"
- Also available without fittings
- All materials are UBA conform
- ACS certified






#### **TECHNICAL DATA**

Media			
Medium:	Drinking water		
Connections/Sizes			
Connection sizes:	1/2" - 2"		
Nominal sizes:	DN15 - DN50		
Pressure values			
Max. inlet pressure:	25 bar		
Outlet pressure:	1.5 - 6 bar		
Preset outlet pressure:	3 bar		
Min. pressure drop:	1 bar		
Operating temperatures			
Max. operating temperature	30 °C		
$medium\ accord.\ to\ EN\ 1567:$			
Max. operating temperature medium (10 bar):	70 °C		

#### CONSTRUCTION

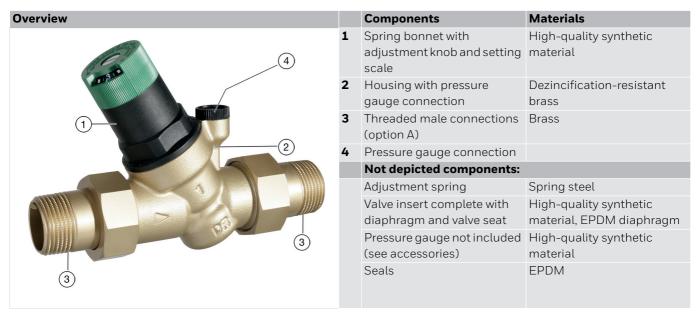

#### **METHOD OF OPERATION**

Spring loaded pressure reducing valves operate by means of a force equalising system. The force of a diaphragm operates against the force of an adjustment spring. If the outlet pressure and therefore diaphragm force fall because water is drawn, the then greater force of the spring causes the valve to open. The outlet pressure then increases until the forces between the diaphragm and the spring are equal again.

The inlet pressure has no influence in either opening or closing of the valve. Because of this, inlet pressure fluctuation does not influence the outlet pressure, thus providing inlet pressure balancing.

#### TRANSPORTATION AND STORAGE

Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	5°C
Max. ambient temperature:	55 °C
Min. ambient relative humidity:	25 % *
Max. ambient relative humidity:	85 % *

<sup>\*</sup>non condensing

#### **INSTALLATION GUIDELINES**

#### **Setup requirements**

- Horizontal and vertical installation position possible
  - In vertical installation position spring bonnet with adjustment knob facing upwards
- Install shut-off valves
- The installation location should be protected against frost and be easily accessible
  - Pressure gauge can be read off easily
  - Simplified maintenance and cleaning
- To guarantee perfect functioning, a filter must be inserted ahead of the pressure reducing valve
- Provide a straight section of pipework of at least five times the nominal valve size after the pressure reducing valve (in accordance with EN 806-2)
- Requires regular maintenance in accordance with EN 806-5

#### **Installation Example**

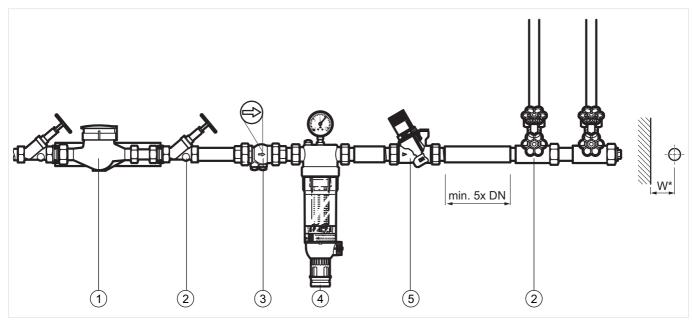


Fig. 1 Standard installation example for the pressure reducing valve

- 1 Water meter
- 2 Shut-off valve
- 3 Check valve
- 4 Filtering unit
- 5 Pressure reducing valve

Connection sizes:	<sup>1</sup> / <sub>2</sub> "	3/4"	1"	1 <sup>1</sup> /4"	1 <sup>1</sup> / <sub>2</sub> "	2"
Distance in mm (W*):	55	55	60	60	70	70

<sup>\*</sup> Required installation distances between the centerline of the pipework and the surrounding in dependency of the connection size.

# **TECHNICAL CHARACTERISTICS**

# kvs-Values

Connection sizes:	1/2"	<sup>3</sup> / <sub>4</sub> "	1"	1 <sup>1</sup> /4"	1 <sup>1</sup> / <sub>2</sub> "	2"
$k_{vs}$ -value ( $m^3/h$ ):	3.0	3.5	3.7	7.3	7.5	7.7
IfBt designation:	P-IX 9290/II	P-IX 9290/II	P-IX 9290/II	P-IX 9290/II	- *	- *
DIN/DVGW Registration No.:	NW-6330 BN 0584					

<sup>\*</sup> Compulsory testing in sizes R  $^{1}/_{2}$ " to R 1  $^{1}/_{4}$ 

### Pressure drop characteristics


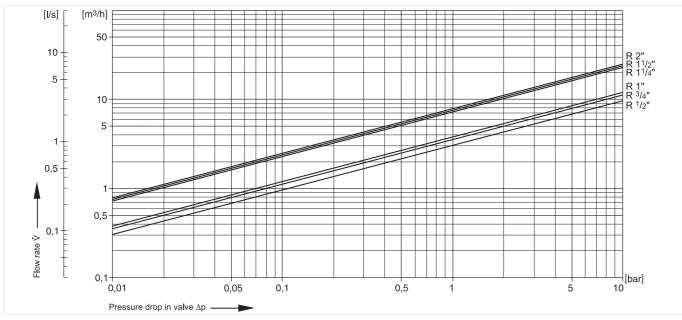


Fig. 2 Pressure drop within the valve in dependency of the flow rate and the used connection size

# **DIMENSIONS**

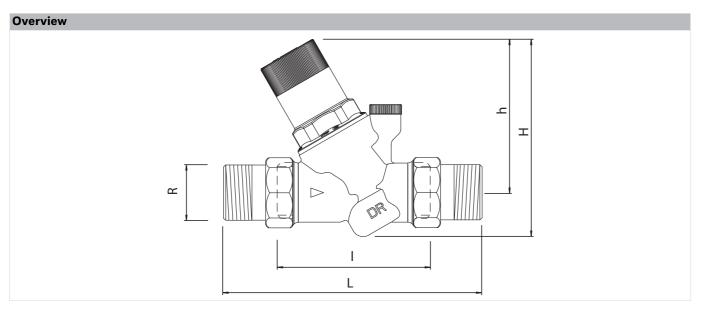

Parameter	Values						
Connection sizes:	R	1/2"	3/4"	1"	11/4"	1 <sup>1</sup> /2"	2"
Nominal size diameter:	DN	15	20	25	32	40	50
Weight:	kg	0.65	0.82	1.35	2.20	3.09	4.46
Dimensions:	L	155	163	176	207	216	257
	- 1	95	95	97	115	120.5	140
	Н	123	123	124	178	181	178
	h	96	96	96	147	147	147

Note: All dimensions in mm unless stated otherwise.

# **ORDERING INFORMATION**

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

#### **Options**

The valve is available in the following sizes: 1/2", 3/4", 1",  $1^1/4$ ",  $1^1/2$ " and 2".

- standard
- not available

		D05FSA	D05FSE
Connection type:	external threaded connection set on in- and outlet	•	-
	external thread on in- and outlet	-	•

Note: ... = space holder for connection size

Note: Ordering number example for 1<sup>1</sup>/<sub>4</sub>" and type A valve: D05FS-11/4A

## **Accessories**

	Descripti	on	Dimension	Part No.
	M38K	Pressure gauge		
		Housing diameter 50 mm, below connection t	hread G <sup>1</sup> / <sub>4</sub> "	
6		Note: Please indicate upper value of pressure range when the state of		
		Range: 0 - 4 bar		M38K-A4
bar atta		Range: 0 - 10 bar		M38K-A10
		Range: 0 - 16 bar		M38K-A16
		Range: 0 - 25 bar		M38K-A25
	DS05	Insulation shells		
		Please indicate nominal size $(^{1}/_{2}"$ to $2")$ when	ordering e.g. DS05	5-1/2
				DS05
	ZR06K	Double ring wrench		
		For removal of spring bonnet and filter bowl		
		3		ZR06K
	VST06A	Connection set		
		Threaded connections		
			1/2"	VST06-1/2A
			3/4"	VST06-3/4A
			1"	VST06-1A
			11/4"	VST06-11/4A
			11/2"	VST06-11/2A
			2"	VST06-2A
	VST06B	Connection set		
6		Solder connections		
			1/2"	VST06-1/2B
			3/4"	VST06-3/4B
			1"	VST06-1B
			11/4"	VST06-11/4B
			11/2"	VST06-11/2B
			2"	VST06-2B

## **Spare Parts**

Pressure Reducing Valve D05FS, from 2007 onwards

Overview	

	Description	Dimension	Part No.					
1	Spring bonnet complete							
		1/2" - 1"	0901515					
		11/4" - 2"	0903890					
2	Valve insert complete (v	without filter)						
		1/2" - 1"	D05FA-1/2B					
		11/4" - 2"	D05FA-11/4B					
3	Replacement filter inse	rt						
		1/2" - 1 "	ES05F-1/2A					
4	Blanking plug with O-ri	ng R¹/₄" (5 pcs.	.)					
		1/2" - 2"	S06K-1/4					



Ademco 1 GmbH, Hardhofweg 40, 74821 MOSBACH, GERMANY

Phone: +49 6261 810 Fax: +49 6261 81309