

# **Braukmann D06F**

## Pressure Reducing Valve

With Balanced Seat and Set Point Scale

#### **Application**

According EN 806-2 pressure reducing valves of this type protect household water installations against excessive pressure from the supply. They can also be used for industrial or commercial applications within the range of their specification.

By installing a pressure reducing valve, pressurization damage is avoided and water consumption is reduced.

The set pressure is also maintained constant, even when there is wide inlet pressure fluctuation.

Reduction of the operating pressure and maintaining it at a constant level minimizes flow noise in the installation.

#### **Approvals**

- **DVGW**
- WRAS (up to 23 °C)

#### **Special Features**

- Inlet pressure balancing no influence on outlet pressure by fluctuating inlet pressure
- Up to size 1<sup>1</sup>/<sub>4</sub>" approved by LGA for low noise, Group 1 without limitations
- The valve insert is of high-quality synthetic material and can be fully exchanged
- The outlet pressure is set by turning the adjustment knob
- The set pressure is directly indicated on the set point scale
- The adjustment spring is not in contact with the drinking water
- Integral fine filter
- Also available without fittings
- Conforms to BSEN 1567
- All materials are UBA conform
- ACS certified
- 5 years guarantee








#### **Technical Data**

Media	
Medium:	Drinking water
Connections/Sizes	
Connection sizes:	1/2" - 2"
Nominal sizes:	DN15 - DN50
Pressure values	
Max. inlet pressure with clear filter bowl:	16 bar
Max. inlet pressure with brass filter bow:	25 bar
Outlet pressure:	1.5 - 6 bar
Preset outlet pressure:	3 bar
Min. pressure drop:	1 bar
Operating temperatures	
Max. operating temperature medium (10 bar/brass filter bowl):	70 °C
Max. operating temperature medium accord. to EN 1567:	30 °C

Use the SM06T brass filter bowl, if the valve can be exposed to Note:

UV radiation or solvent vapors.

#### Construction

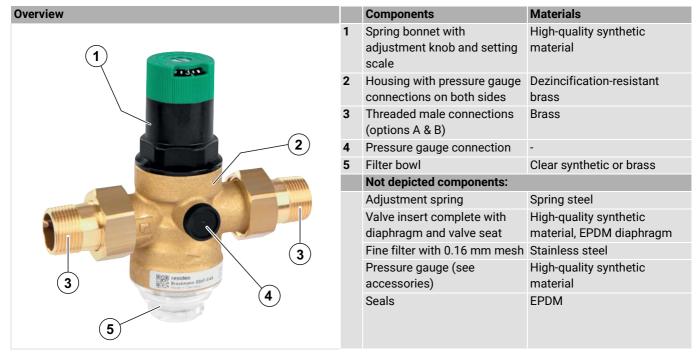

#### Method of Operation

Spring loaded pressure reducing valves operate by means of a force equalising system. The force of a diaphragm operates against the force of an adjustment spring. If the outlet pressure and therefore diaphragm force fall because water is drawn, the then greater force of the spring causes the valve to open. The outlet pressure then increases until the forces between the diaphragm and the spring are equal again.

The inlet pressure has no influence in either opening or closing of the valve. Because of this, inlet pressure fluctuation does not influence the outlet pressure, thus providing inlet pressure balancing.

#### **Transportation and Storage**

Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	5 °C
Max. ambient temperature:	55 °C
Min. ambient relative humidity:	25 % *
Max. ambient relative humidity:	85 % *

<sup>\*</sup>non condensing

#### Installation Guidelines

#### **Setup requirements**

- Horizontal and vertical installation position possible
- Install shut-off valves
- The device downstream should be protected by means of a safety valve (installed downstream of the pressure reducing valve). In these cases the delivery pressure of the pressure reducing valve shall be set to at least 20 % below the response pressure of the pressure relief-valve according to EN 806-2
- The installation location should be protected against frost and be easily accessible
  - Pressure gauge can be read off easily
  - With clear filter bowl, degree of contamination can be easily seen
  - Simplified maintenance and cleaning
- · Install downstream of the filter or strainer
- Provide a straight section of pipework of at least five times the nominal valve size after the pressure reducing valve (in accordance with EN 806-2)
- Requires regular maintenance in accordance with EN 806-5

#### **Installation Example**

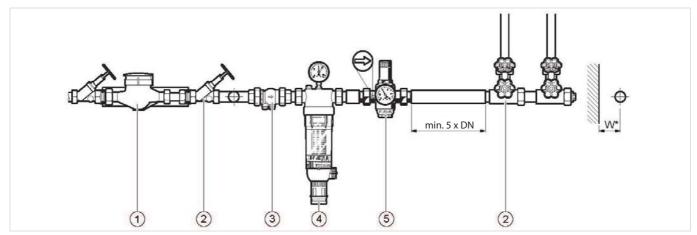


Fig. 1 Standard installation example for the pressure reducing valve

- 1 Water meter
- 2 Shut-off valve
- 3 Check valve
- 4 Filtering unit
- 5 Pressure reducing valve

Connection sizes:						
DN:	15	20	25	32	40	50
inch:	1/2"	3/4"	1"	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>2</sub> "	2"
Distance in mm (W*):	55	60	60	60	70	70

<sup>\*</sup> Required installation distances between the centerline of the pipework and the surrounding in dependency of the connection size.

#### **Technical Characteristics**

#### kvs-Values

Connection sizes:	15	20	25	32	40	50	
k <sub>vs</sub> -value (m <sup>3</sup> /h):	2.4	3.1	5.8	5.9	12.6	12.0	
IfBt designation:	P-IX 1582/I	P-IX 1582/I	P-IX 1582/I	P-IX 1582/I	_ *	_ *	
DVGW registration number:	DW-6330 AT 2314						

<sup>\*</sup> Compulsory testing in sizes R  $^{1}/_{2}$ " to R 1  $^{1}/_{4}$ "

#### Pressure drop characteristics


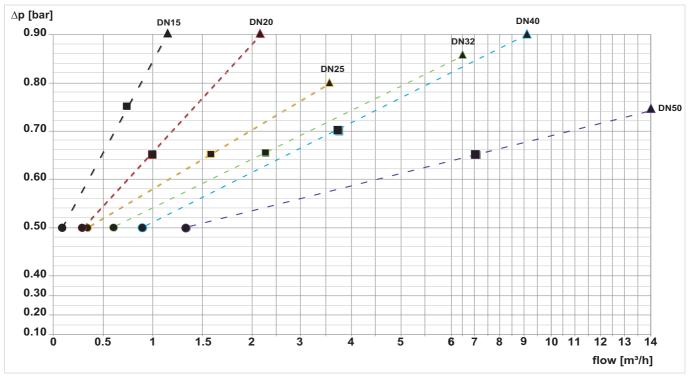


Fig. 2 Pressure drop within the valve in dependency of the flow rate and the used connection size Pressure setting: P1: 8 bar, P2: 3 bar

Nominal size diameter	DN15	DN20	DN25	DN32	DN40	DN50
•	0.13 m <sup>3</sup> /h	0.32 m <sup>3</sup> /h	0.36 m <sup>3</sup> /h	$0.58  \text{m}^3/\text{h}$	0.91 m <sup>3</sup> /h	1.4 m <sup>3</sup> /h
	0.75 m <sup>3</sup> /h	1.00 m <sup>3</sup> /h	1.6 m <sup>3</sup> /h	2.3 m <sup>3</sup> /h	3.75 m <sup>3</sup> /h	7 m <sup>3</sup> /h
$\triangle$ $\triangle$ 2m/s flow rate = QN	1.27 m <sup>3</sup> /h	2.27 m <sup>3</sup> /h	3.6 m <sup>3</sup> /h	6.5 m <sup>3</sup> /h	9.1 m <sup>3</sup> /h	14 m <sup>3</sup> /h
Flow rate 4m/s flow velocity	2.54 m <sup>3</sup> /h	4.54 m <sup>3</sup> /h	7.2 m <sup>3</sup> /h	11.6 m <sup>3</sup> /h	18.2 m <sup>3</sup> /h	28 m <sup>3</sup> /h

#### **Dimensions**

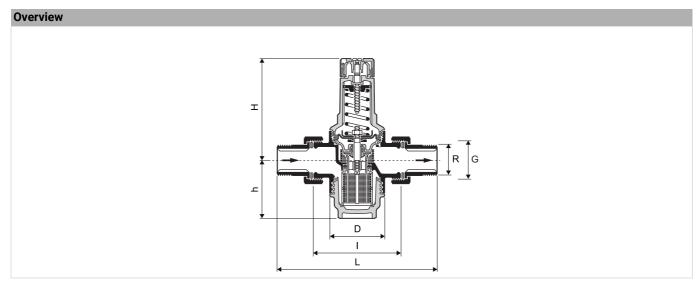

Parameter		Values					
Connection sizes:	R	<sup>1</sup> /2"	3/4"	1"	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>2</sub> "	2"
	G	3/4"	1"	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>2</sub> "	2"	21/2"
Nominal size diameter:	DN	15	20	25	32	40	50
Weight:	kg	8.0	1.0	1.4	2.0	3.3	4.5
Dimensions:	L	140	160	180	200	225	255
	1	80	90	100	105	130	140
	Н	89	89	111	111	173	173
	h	58	58	64	64	126	126
	D	54	54	61	61	82	82

Note: All dimensions in mm unless stated otherwise.

### **Ordering Information**

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

#### **Options**

The valve is available in the following sizes:  $^{1}/_{2}$ ",  $^{3}/_{4}$ ",  $^{1}/_{4}$ ",  $^{1}/_{2}$ " and  $^{2}$ ".

- standard
- not available

		D06FA	D06FB	D06FE
Max. operating	30 °C	•	-	•
temperature medium:	70 °C	-	•	-
Filter bowl:	clear	•	-	•
	brass	-	•	-
Connection type:	external threaded connection set on in- and outlet	•	•	-
	external thread on in- and outlet	-	-	•

Note: ... = space holder for connection size

Note: Ordering number example for  $1^{1}/4^{"}$  and type A valve: D06F-11/4A

#### **Accessories**

	Description		Dimension	Item No.
	M07M	Pressure gauge		
		Housing diameter 63 mm, rear connection thread 0	G <sup>1</sup> / <sub>4</sub> "	
C. 1 6		Range: 0 - 4 bar		M07M-A4
8-		Range: 0 - 10 bar		M07M-A10
3 tar 0 10		Range: 0 - 16 bar		M07M-A16
411		Range: 0 - 25 bar		M07M-A25
	ZR06K	Double ring wrench		
		For removal of spring bonnet and filter bowl		
				ZR06K
Ъ	VST06A	Connection set		
		Threaded connections		
			1/2"	VST06-1/2A
			3/4"	VST06-3/4A
			1"	VST06-1A
			1 <sup>1</sup> / <sub>4</sub> "	VST06-11/4A
			11/2"	VST06-11/2A
			2"	VST06-2A
	VST06B	Connection set		
		Solder connections		
			1/2"	VST06-1/2B
			3/4"	VST06-3/4B
			1"	VST06-1B
			1 <sup>1</sup> / <sub>4</sub> "	VST06-11/4B
			1 <sup>1</sup> / <sub>2</sub> "	VST06-11/2B
			2"	VST06-2B

**Spare Parts** 

Pressure Reducing Valve D06F, from 1997 onwards

Overview		Description	Dimension	Item No.		
	1	Spring bonnet complete				
			1/2" - 3/4"	0901515		
<u>(1)</u>			1" + 1 <sup>1</sup> / <sub>4</sub> "	0901517		
			$1^{1}/_{2}$ " + 2"	0901518		
	2	Valve insert complete (wi	Valve insert complete (without filter)			
			$^{1}/_{2}$ " + $^{3}/_{4}$ "	D06FA-1/2		
			1" + <sup>1</sup> / <sub>4</sub> "	D06FA-1B		
			$1^{1}/_{2}" + 2"$	D06FA-11/2		
(8)	3	Union seal washer (10 pc	s.)			
			1/2"	0901443		
			<sup>3</sup> / <sub>4</sub> "	0901444		
			1"	0901445		
			1 <sup>1</sup> / <sub>4</sub> "	0901446		
			1 <sup>1</sup> / <sub>2</sub> "	0901447		
			2"	0901448		
	4	O-ring set (10 pcs.)				
			$^{1}/_{2}$ " + $^{3}/_{4}$ "	0901246		
			1" + 1 <sup>1</sup> / <sub>4</sub> "	0901499		
			$1^{1}/_{2}$ " + 2"	0901248		
8)	5	Clear filter bowl with O-ri	~			
			$^{1}/_{2}$ " + $^{3}/_{4}$ "	SK06T-1/2		
			1" + 1 <sup>1</sup> / <sub>4</sub> "	SK06T-1B		
2			$1^{1}/_{2}$ " + 2"	SK06T-11/2		
7	6	Brass filter bowl with O-ring				
			$^{1}/_{2}$ " + $^{3}/_{4}$ "	SM06T-1/2		
			1" + 1 <sup>1</sup> / <sub>4</sub> "	SM06T-1B		
(5)(6) (4)			$1^{1}/_{2}$ " + 2"	SM06T-11/2		
(5)(6) (4)	7	Replacement filter insert				
			$^{1}/_{2}$ " + $^{3}/_{4}$ "	ES06F-1/2A		
			1" + 1 <sup>1</sup> / <sub>4</sub> "	ES06F-1B		
			$1^{1}/_{2}$ " + 2"	ES06F-11/2A		
	8	Blanking plug with O-ring				
			<sup>1</sup> / <sub>2</sub> " - 2"	S06K-1/4		



Ademco 1 GmbH, Hardhofweg 40, 74821 MOSBACH, GERMANY Phone: +49 6261 810 Manufactured for and on behalf of Pittway Sàrl, Z.A., La Pièce 6, 1180 Rolle, Switzerland Subject to change. EN0H-1002GE23 R0224 © 2024 Resideo Technologies, Inc. All rights reserved.